

LED-BD30	19CH Mode1	14CH Mode2	DMX Value	Function
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---7	Undefined
			8---63	Fast Strobe----->SlowStrobe
			64---71	Undefined
			72---127	Fast Puslation Slow Close--->Fast Puslation Fast Close
			128---133	Undefined
			134---189	Slow Puslation Fast Close--->Fast Puslation Fast Close
			190--195	Undefined
			196--250	Random Strobe
			251--255	Undefined
Red	4	3	0---255	Darkness----->Bright
Red FINE	5		0---255	
Green	6	4	0---255	Darkness----->Bright
Green FINE	7		0---255	
Blue	8	5	0---255	Darkness----->Bright
Blue FINE	9		0---255	
White	10	6	0---255	Darkness----->Bright
White FINE	11		0---255	
Color	12	7	0---10	Undefined
			11---20	Color1
			21---30	Color2
			31---40	Color3
			41---50	Color4
			51---60	Color5
			61---70	Color6
			71---80	Color7
			81---90	Color8
			91---100	Color9
			101---110	Color10
111--199	Undefined			
120---250	Color Loop(Color1<--->Color10)			
251---255	Undefined			
Focus	13	8	0---255	
Pan(X)	14	9	0---255	
Pan(X) Fine	15	10	0---255	
Tilt(Y)	16	11	0---255	
Tilt(Y) Fine	17	12	0---255	
P/T Speed	18	13	0---128	Fastest----->Slowest
			129---170	SlowSpeed (1/3 MaxSpeed)

			171---211 212---255	MediumSpeed (1/2 MaxSpeed) Fast Speed (Fastest Speed)
Control	19	14	0---127 128---153 154---179 180---205 206---231 232---255	Undefined Undefined Undefined Undefined Undefined Reset ALL( > 3s)