

Seer 900ii	21CH Mode1	18CH Mode2	DMX Value	Funciton
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---3	Closed
			4---103	Slow Strobe--->Fast Strobe
			104---107	Open
			108---207	Slow Pulsation--->Fast Pulsation
			208---212	Open
			213---225	Random Slow Strobe
			226---238	Random Medium Strobe
			239---251	Random Fast Strobe
252---255	Open			
Color	4	3	0---4	WHITE
			5---12	RED
			13---21	ORANGE
			22---29	AQUAMARINE
			30---38	GREEN
			39---46	LIGHT GREEN
			47---55	LAVENDER
			56---63	PINK
			64---72	YELLOW
			73---81	MAGENTA
			82---89	CYAN
			90---98	CTO 260
			99---106	CTO 190
			107---115	CTB 8000
			116---123	BLUE
			124---189	CW SlowRotation---->FastRotation
190---255	CCW FastRotation---->Slow Rotation			

Fixed Gobo	5	4	0---3	WHITE
			4---7	GOBO 1
			8---11	GOBO 2
			12---15	GOBO 3
			16---19	GOBO 4
			20---23	GOBO 5
			24---27	GOBO 6
			28---31	GOBO 7
			32---35	GOBO 8
			36---39	GOBO 9
			40---43	GOBO 10
			44---47	GOBO 11
			48---51	GOBO 12
			52--- 55	GOBO 13
			56---59	GOBO 14
			60---63	GOBO 15
			64---67	GOBO 16
			68---71	GOBO 17
			72---113	CW FastRotation----->SlowRotation
			114---117	WHITE
			118---159	CCW
			160---166	SlowRotation----->FastRotation
			167---172	GOBO2 Shake Slow---->Fast
			173---179	GOBO3 Shake Slow---->Fast
			180---185	GOBO4 Shake Slow---->Fast
			186--- 191	GOBO 5 Shake Slow---->Fast
			192---198	GOBO6 Shake Slow---->Fast
			199---204	GOBO7 Shake Slow---->Fast
			205---211	GOBO8 Shake Slow---->Fast
			212---217	GOBO9 Shake Slow---->Fast
218---223	GOBO10 Shake Slow---->Fast			
224---230	GOBO11 Shake Slow---->Fast			
231---236	GOBO12 Shake Slow---->Fast			
237---243	GOBO13 Shake Slow---->Fast			
244---249	GOBO14 Shake Slow---->Fast			
250---255	GOBO15 Shake Slow---->Fast			
	GOBO16 Shake Slow---->Fast			

Gobo1 Index	6	5	0---2 3---5 6---10 11---16 17--- 22 23---28 29---34 35---40 41---52 53---70 71---88 89---106 107--124 125---142 143---160 161---178 179---196 197---226 218---255	WHITE GOBO1 GOBO2 GOBO3 GOBO4 GOBO5 GOBO6 GOBO7 GOBO8 GOBO1 Shake Slow---->Fast GOBO2 Shake Slow---->Fast GOBO3 Shake Slow---->Fast GOBO4 Shake Slow---->Fast GOBO5 Shake Slow---->Fast GOBO6 Shake Slow---->Fast GOBO7 Shake Slow---->Fast GOBO8 Shake Slow---->Fast CW SlowRotation----->FastRotation CCW FastRotation-----> SlowRotation
Gobo1Index Rotation	7	6	0---127 128---191 192---255	Position 0 ° ---->360 ° (FINE in CH8) CW SlowRotation-----> FastRotation CCWFastRotation----->SlowRotation
Gobo1Index Rotation FINE	8		0---255	GOBO1 index Rotation FINE
PRISM1 & FORST	9	7	0---127 128---191 192---255	EXCLUDED FORST PRISM1
PRISM1 Rotation	10	8	0---127 128---190 191---194 195---255	Position 0° ---->360° CW FastRotation-----> SlowRotation STOP CCWSlowRotation----->FastRotation
PRISM2	11	9	0---127 128---191 192---255	EXCLUDED PRISM1 PRISM2
PRISM2 Rotation	12	10	0---255	
FOCUS	13	11	0---255	
FOUCS FINE	14	12	0---255	
PAN(X)	15	13	0---255	
PAN(X) FINE	16	14	0---255	
TILTE(Y)	17	15	0---255	
TILTE(Y) FINE	18	16	0---255	
P/T SPEED	19		0---128	Undefined

			129---170 171---211 212---255	Undefined Undefined Undefined
Lamp Control	20	17	0---32 33---64 65---96 97---128 129---160 161---193 194---225 226---255	Undefined LAMP OFF(>4s) Undefined LAMP ON(>4s) Undefined HALF POWER Undefined FULL POWER
Control	21	18	0---127 128---255	Undefined Reset ALL(>4s)