

SEER800SPOT	27CH Mode1	25CH Mode2	DMX Value	Funciton
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---3 4---103 104---107 108---207 208---212 213---225 226---238 239---251 252---255	Closed Slow Strobe--->Fast Strobe Open Slow Pulsation--->Fast Pulsation Open Random Slow Strobe Random Medium Strobe Random Fast Strobe Open
Color	4	3	0---4 5---8 9---12 13---17 18---21 22---25 26---29 30--- 34 35--- 38 39---42 43---46 47---51 52---55 56---59 60---63 64---68 69---72 73---76 77---81 82---85 86---89 90---93 94---97 98---100 101---104 105---108 109---112 113---116 117---120 121---124 125---190	WHITE WHITE + COLOR1 COLOR1 COLOR1+ COLOR2 COLOR2 COLOR2 + COLOR3 COLOR3 COLOR3 + COLOR4 COLOR4 COLOR4 + COLOR5 COLOR5 COLOR5 + COLOR6 COLOR6 COLOR6 + COLOR7 COLOR7 COLOR7 + COLOR8 COLOR8 COLOR8 + COLOR9 COLOR9 COLOR9 + COLOR10 COLOR10 COLOR10 + COLOR11 COLOR11 COLOR11+ COLOR12 COLOR12 COLOR12 + COLOR13 COLOR13 COLOR13 + COLOR14 COLOR14 COLOR14 + WHITE CW SlowRotation----->FastRotation

			191---255	CCW FastRotation---->Slow Rotation
Cyan	5	4	0---255	EXCLUDED---->INSERTED
Magenta	6	5	0---255	EXCLUDED---->INSERTED
Yellow	7	6	0---255	EXCLUDED---->INSERTED
Fixed Gobo	8	7	0---3	WHITE
			4---7	GOBO 1
			8---11	GOBO 2
			12---15	GOBO 3
			16---19	GOBO 4
			20---23	GOBO 5
			24---27	GOBO 6
			28---31	GOBO 7
			32---35	GOBO 8
			36---39	GOBO 9
			40---43	GOBO 10
			44---47	GOBO 11
			48---51	GOBO 12
			52--- 55	GOBO 13
			56---59	GOBO 14
			60---63	GOBO 15
			64--71	GOBO 16
			72---113	CW FastRotation----->SlowRotation
			114---117	WHITE
			118---159	CCW SlowRotation----->FastRotation
			160---166	GOBO2 Shake Slow---->Fast
			167---172	GOBO3 Shake Slow---->Fast
			173---179	GOBO4 Shake Slow---->Fast
			180---185	GOBO5 Shake Slow---->Fast
			186--- 191	GOBO6 Shake Slow---->Fast
			192---198	GOBO7 Shake Slow---->Fast
			199---204	GOBO8 Shake Slow---->Fast
			205---211	GOBO9 Shake Slow---->Fast
			212---217	GOBO10 Shake Slow---->Fast
			218---223	GOBO11 Shake Slow---->Fast
			224---230	GOBO12 Shake Slow---->Fast
			231---236	GOBO13 Shake Slow---->Fast
			237---243	GOBO14 Shake Slow---->Fast
			244---249	GOBO15 Shake Slow---->Fast
			250---255	Undefined
Gobo1 Select	9	8	0---5	WHITE
			6---10	GOBO1
			11---16	GOBO2
			17--- 22	GOBO3
			23---28	GOBO4

			29---34 35---40 41---52 53---70 71---88 89---106 107--124 125---142 143---160 161---178 179---217 218---255	GOBO5 GOBO6 GOBO7 GOBO1 Shake Slow---->Fast GOBO2 Shake Slow---->Fast GOBO3 Shake Slow---->Fast GOBO4 Shake Slow---->Fast GOBO5 Shake Slow---->Fast GOBO6 Shake Slow---->Fast GOBO7 Shake Slow---->Fast CW SlowRotation----->FastRotation CCW FastRotation-----> SlowRotation
GOBO1 index Rotation	10	9	0---127 128---191 192---255	Position 0° ---->360° (FINE in CH11) CW SlowRotation-----> FastRotation CCW FastRotation----->SlowRotation
GOBO1 indexRotation FINE	11		0---255	GOBO1 index Rotation FINE
PRISM1	12	10	0---127 128--255	EXCLUDED INSERTED
PRISM1 Rotation	13	11	0---127 128---190 191---194 195---255	Position 0° ---->360° CW FastRotation-----> SlowRotation STOP CCW Slow Rotation----->Fast Rotation
PRISM2	14	12	0---127 128--255	EXCLUDED INSERTED
PRISM2 Rotation	15	13	0---127 128---190 191---194 195---255	Position 0° ---->360° CW FastRotation-----> SlowRotation STOP CCW Slow Rotation----->Fast Rotation
FORST1(For Gobo)	16	14	0---127 128---255	EXCLUDED INSERTED
FORST2	17	15	0---127 128---255	EXCLUDED INSERTED
Animation	18	16	0---5 6---127 128---191 192---255	White Animation Shake Slow---->Fast CW Rotation Slow----->Fast CCW Rotation Fast----->Slow
FOCUS	19	17	0---255	
ZOOM	20	18	0---255	
PAN(X)	21	19	0---255	
PAN(X) FINE	22	20	0---255	
TILTE(Y)	23	21	0---255	
TILTE(Y) FINE	24	22	0---255	
P/T SPEED	25	23	0---128	Fastest----->Slowest

			129---170 171---211 212---255	Slow Speed (1/3 MaxSpeed) Medium Speed (1/2 MaxSpeed) Fast Speed (Fastest Speed)
Lamp Control	26	24	0---32 33---64 65---96 97---128 129---160 161---193 194---225 226---255	Undefined LAMP OFF(>4s) Undefined LAMP ON(>4s) Undefined HALF POWER Undefined FULL POWER
Control	27	25	0---127 128---255	Undefined Reset ALL(>4s)

*NOTE:关闭灯泡后，请勿立即又打开灯泡，请等待大于 2 分钟之后再点灯泡。如果无法点亮灯泡，试试给灯泡一次“关灯泡”信号，然后再去点灯泡。