

Leo-BD30	19CH Mode1	14CH Mode2	DMX Value	Function
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---7 8---63 64---71 72---127  128---133 134---189  190--195 196--250 251--255	Undefined Fast Strobe----->SlowStrobe Undefined Fast Puslation Slow Close--->Fast Puslation Fast Close Undefined Slow Puslation Fast Close--->Fast Puslation Fast Close Undefined Random Strobe Undefined
Red	4	3	0---255	Darkness----->Bright
Red FINE	5		0---255	
Green	6	4	0---255	Darkness----->Bright
Green FINE	7		0---255	
Blue	8	5	0---255	Darkness----->Bright
Blue FINE	9		0---255	
White	10	6	0---255	Darkness----->Bright
White FINE	11		0---255	
Color	12	7	0---10 11---20 21---30 31---40 41---50 51---60 61---70 71---80 81---90 91---100 101---110 111--199 120---250 251---255	Undefined Color1 Color2 Color3 Color4 Color5 Color6 Color7 Color8 Color9 Color10 Undefined Color Loop(Color1<--->Color10) Undefined
Focus	13	8	0---255	
Pan(X)	14	9	0---255	
Pan(X) Fine	15	10	0---255	
Tilt(Y)	16	11	0---255	
Tilt(Y) Fine	17	12	0---255	
P/T Speed	18	13	0---128	Fastest----->Slowest

			129---170	SlowSpeed (1/3 MaxSpeed)
			171---211	MediumSpeed (1/2 MaxSpeed)
			212---255	Fast Speed (Fastest Speed)
Control	19	14	0---127	Undefined
			128---153	Undefined
			154---179	Undefined
			180---205	Undefined
			206---231	Undefined
			232---255	Reset ALL( > 3s)