

Seer-400B	17CH Mode1	14CH Mode2	DMX Value	Funciton
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---3 4---103 104---107 108---207 208---212 213---225 226---238 239---251 252---255	Closed Slow Strobe--->Fast Strobe Open Slow Pulsation--->Fast Pulsation Open Random Slow Strobe Random Medium Strobe Random Fast Strobe Open
Color	4	3	0---4 5---12 13---21 22---29 30---38 39---46 47---55 56---63 64---72 73---81 82---89 90---98 99---106 107---115 116---123 124---189 190---255	WHITE RED ORANGE AQUAMARINE GREEN LIGHT GREEN LAVENDER PINK YELLOW MAGENTA CYAN CTO 260 CTO 190 CTB 8000 BLUE CW SlowRotation---->FastRotation CCW FastRotation---->Slow Rotation

Fixed Gobo	5	4	0---3 4---7 8---11 12---15 16---19 20---23 24---27 28---31 32---35 36---39 40---43 44---47 48---51 52--- 55 56---59 60---63 64---67 68---71 72---113 114---117 118---159 160---166 167---172 173---179 180---185 186--- 191 192---198 199---204 205---211 212---217 218---223 224---230 231---236 237---243 244---249 250---255	WHITE GOBO 1 GOBO 2 GOBO 3 GOBO 4 GOBO 5 GOBO 6 GOBO 7 GOBO 8 GOBO 9 GOBO 10 GOBO 11 GOBO 12 GOBO 13 GOBO 14 GOBO 15 GOBO 16 GOBO 17 CW FastRotation----->SlowRotation WHITE CCW SlowRotation----->FastRotation GOBO2 Shake Slow---->Fast GOBO3 Shake Slow---->Fast GOBO4 Shake Slow---->Fast GOBO 5 Shake Slow---->Fast GOBO6 Shake Slow---->Fast GOBO7 Shake Slow---->Fast GOBO8 Shake Slow---->Fast GOBO9 Shake Slow---->Fast GOBO10 Shake Slow---->Fast GOBO11 Shake Slow---->Fast GOBO12 Shake Slow---->Fast GOBO13 Shake Slow---->Fast GOBO14 Shake Slow---->Fast GOBO15 Shake Slow---->Fast GOBO16 Shake Slow---->Fast
FORST	6	5	0---127 128---255	EXCLUDED INSERTION
PRISM	7	6	0---127 128---192 193---255	EXCLUDED INSERTION (STOP) SlowRotation----->FastRotation
NULL	8	7	0---255	NULL

FOCUS	9	8	0---255	
FOUCS FINE	10		0---255	
PAN(X)	11	9	0---255	
PAN(X) FINE	12	10	0---255	
TILTE(Y)	13	11	0---255	
TILTE(Y) FINE	14	12	0---255	
XY Rotation	15		0---128 129---170 171---211 212---255	Undefined Undefined Undefined Undefined
Lamp Control	16	13	0---32 33---64 65---96 97---128 129---160 161---193 194---225 226---255	Undefined LAMP OFF(>4s) Undefined LAMP ON(>4s) Undefined HALF POWER Undefined FULL POWER
Control	17	14	0---127 128---255	Undefined Reset ALL(>4s)