

Eos-F950A	21CH Mode1	16CH Mode2	DMX Value	Function
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---7 8---63 64---71 72---127 128---133 134---189 190--195 196--250 251--255	Undefined Fast Strobe----->SlowStrobe Undefined Fast Puslation Slow Close--->Fast Puslation Fast Close Undefined Slow Puslation Fast Close--->Fast Puslation Fast Close Undefined Random Strobe Undefined
Red	4	3	0---255	Darkness----->Bright
Red FINE	5		0---255	
Green	6	4	0---255	Darkness----->Bright
Green FINE	7		0---255	
Blue	8	5	0---255	Darkness----->Bright
Blue FINE	9		0---255	
White	10	6	0---255	Darkness----->Bright
White FINE	11		0---255	
NULL	12	7	0---10 11---20 21---30 31---40 41---50 51---60 61---70 71---80 81---90 91---100 101---110 111--199 120---250 251---255	Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined
ZOOM	13	8	0---255	
NULL	14	9	NULL	NULL
Pan	15	10	0---255	
Pan FINE	16	11	0---255	

Tilte	17	12	0---255	
Tilte FINE	18	13	0---255	
NULL	19	14	NULL	
P/T Speed	20	15	0---128 129---170 172---211 212---255	Fastest Speed----->Slowest Speed Slow Speed(1/ 3 maxspeed) Medium Speed(2/ 3 maxspeed) Fast Speed
Control	21	16	0---130 131---155 128---255	Undefined Undefined Reset ALL